

## 【Instructions to users】

Please read the "Instruction Manual" carefully prior to the use of your air conditioner so as to ensure proper operations.

### Instructions for Installation

 
- Make sure to have the professional after-sale service persons of our company or the authorized dealers to install the units before you use.

1. The units are not to be installed at places where there might be leakage of combustible gases.




In case that the leaked gas accumulates around the units, there might occur the accident of fire hazards.

Make sure that the earth leakage-circuit breaker is installed.

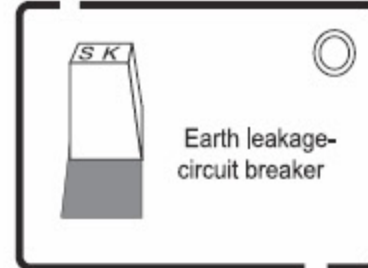


Absence of the earth leakage-circuit breaker might lead to electric shock and some other hazards.

 After the connecting of the wires between the indoor unit and the outdoor unit, check whether the connecting is loose or not by pulling the wire with a little force.

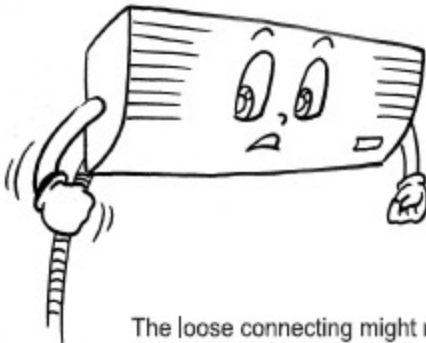

The loose connecting might result in fire hazard.

 
Make sure that the air conditioner is properly grounded.

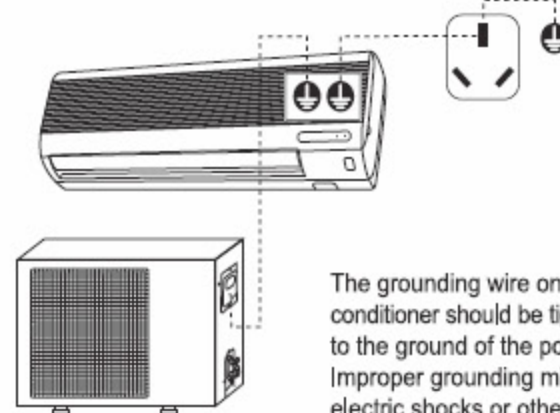

The grounding wire on the air conditioner should be tightly connected to the ground of the power source. Improper grounding might cause electric shocks or other hazards.


### Instructions for Operation

 Never try to stop the operation of the air conditioner by operate the switch.

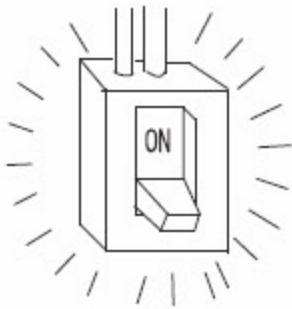


Such performance might cause electric shocks or fire hazards.

 Do not press, stretch, damage, heat or modify the power line.

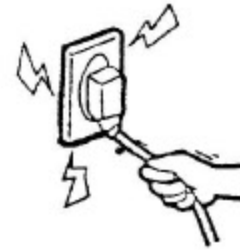


It might cause electric shocks, overheating, fire hazards, etc. If the power line wire is damaged or needs to be replaced due to some other reasons, please make sure to have dealer or the authorized maintenance people to do the replacement.

 Do not operate the switch by wet hands.

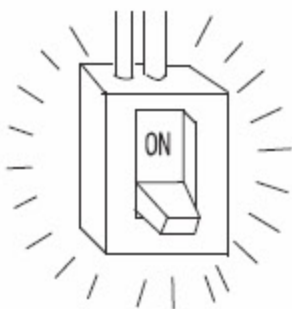

It might cause electric shocks.

 Never use the fuse with incorrect capacity or any other metal wires.

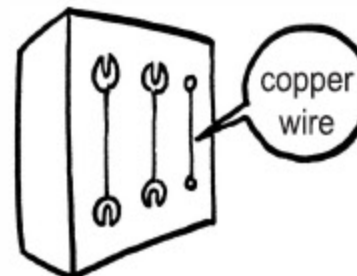

The use of metal or copper wires for fuse might cause operational failures or fire hazards.

Try to avoid the sunlight and hot air from entering the room.



During the cooling operation, curtains or window-blinds should be used to shade off the sunlight.

Try to minimize the generation of heat during the operation of cooling.



Place the heating sources out of the room.

Do not use combusting apparatuses in the air-conditioned room.



It might lead to the incomplete combustion of these apparatuses.

Do not place insecticides or paints and other flammable sprays near the air conditioner, or spray them directly at the air conditioner.



It might cause fire hazards.

When it is necessary to use the air conditioner and the combusting apparatuses in the same room, air ventilation has to be made from time to time.



Insufficient ventilation might lead to lack of oxygen or some other dangers.

Prior to the maintenance of the air conditioner, please cut off the power supply first. Never do the cleaning of the units when the fan is in high-speed operations.



Do not insert sticks or bars into the air vents.



As the fan is in high-speed operation, the insertion might lead to accidents.

Adjust the air direction correctly.



Properly adjust the up/down and left/right directions of the air flow so as to get the even room temperature.

Do not keep exposed to the cool air for long time.



It might cause discomforts of the body, which is harmful to your health.

Do not clean the air conditioner with water.



It might cause electric shocks.

Do not attach, hang or stack articles on the air conditioner.



It might lead to the falling down of the air conditioner unit, which will result in accidents or injuries.

Check the supporting structures of the units carefully.



In case of damages, the supporting structures should be immediately repaired so as to avoid falling down of the unit, which might cause human injuries or other accidents.

Do not sit on the outdoor unit or place any other objects on it.



The falling down of the unit or the objects might cause human injuries and other accidents.

Do not use the following substances:



Hot water (over 104°F or 40°C)  
The use of hot water will deform the air conditioner or make it fade in color,  
Gasoline, paint diluent, benzene and polishing agents, etc.  
These substances will deform the air conditioner or cause scratches.

Put down the power when the unit is not in use for long time so as to ensure safety.



When the plug is to be pulled out, make sure that the switch of the air conditioner is turned off.

## Instructions for Removal and Repair

- When removal or repair is needed, please contact the dealer or authorized maintenance & installation people.
- In case of any abnormal occurrences (smell of burning), please stop the operation at once, cut off the power supply and contact the dealer or authorized maintenance people.