


Swing Operation

Please set swing operation if you want the cool air blow to all over the room.

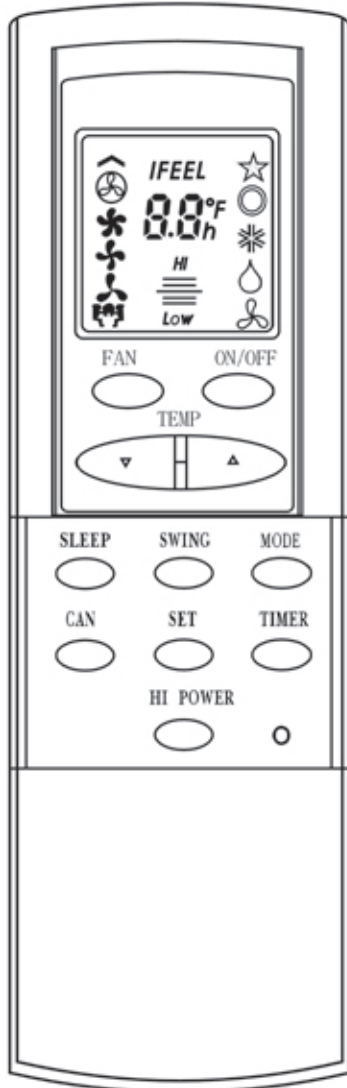

Please set the following operation while the air-conditioner is running.

Press ^{SWING} button.

- Cancel the swing operation.

Please press ^{SWING} button.

-
- The swing operation will be cancelled if the button is pressed. please set this swing operation if you want the cool air blow to all over the room.