【Operation and indication sections of remote controller】

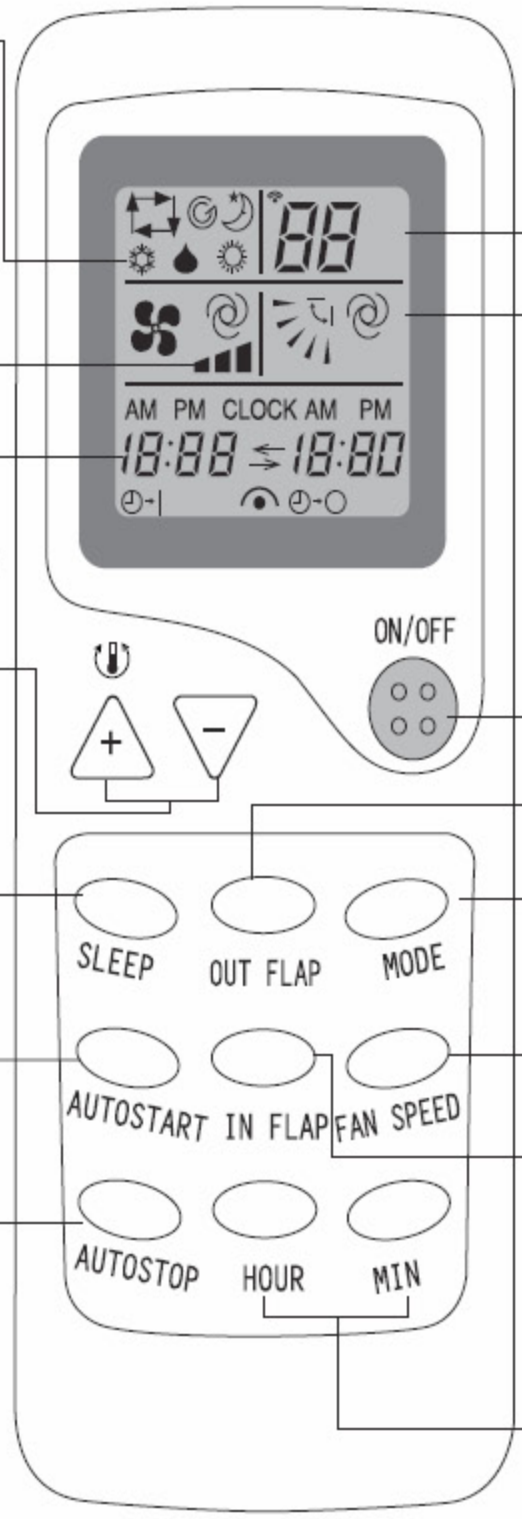

OPERATION MODE indicator
Indicates selected operation mode

Fan speed indicator
Indicates the selected air rate.

TIME indicator
During TIMER operation indicator TIMER
During normal operation indicator PRESENT TIME

SET TEMPERATURE button
The two buttons set the room temperature.

SLEEP button
This button changes to SLEEP operation.

AUTOSTART button
This button used for selecting timed starting

AUTO STOP button
This button used for selecting timed stopping.

CLK button
This button set clock

TEMPERATURE indicator
Indicates the set temperature. (it doesn't indicate temperature when operation mode is AUTO select.)

AIR FLOW indicator
Indicates selected flap mode.

ON/OFF button
This button, when pressed, starts operation and stops when repressed.

OUT FLAP button
This button used for selection of the up/down air flow direction.Whenever pressed,changes the direction is the following order:
→ → → → no indication(fixed direcion)

OPERATION MODE select button
This button,whenever pressed,changes the mode in the following order.
(AUTO) → (COOL) → (DRY) → (HEAT)/ (FAN)

FAN SPEED button
This button set air rate.

IN FLAP button
This button used for selection of the left/right air flow direction,whenever pressed the in flap will swing or fix.

TIME SET button
The two button used for setting present time and auto start or auto stop.

RST button
This button let computer reset

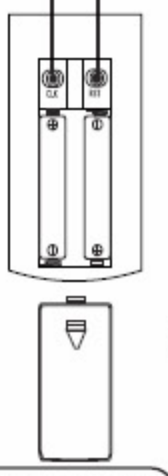

Unload the back Cover

NOTE
Above figure shows all indications for the purpose of explanation, but practically only the pertinent When air-conditioner is cool-only model, the HEAT change to FAN.

Transmission procedure

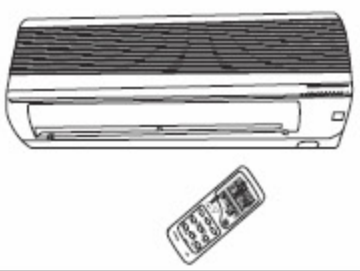

When each button on the remote controller is pressed with the remote controller pointing toward the air conditioner unit, signal is sent. When the signal is received correctly, the receiving sound is emitted from the unit.